
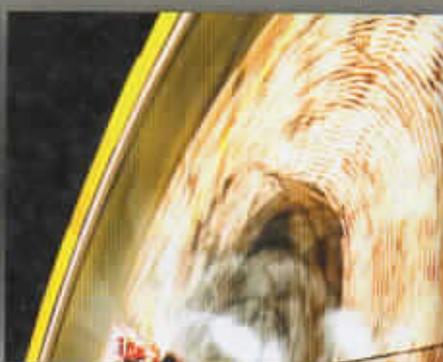


**INTRODUCTION TO THE  
CONTROLLOGIX  
PROGRAMMABLE  
AUTOMATION  
CONTROLLER**

**WITH LABS**

**2ND EDITION**

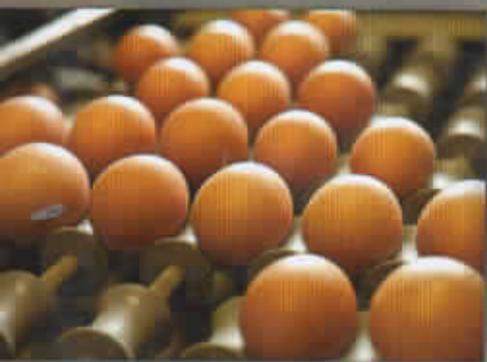

**GARY DUNNING**

Ref  
G21.3  
D924  
2014  
7



---

# INTRODUCTION TO THE CONTROLLOGIX PROGRAMMABLE AUTOMATION CONTROLLER WITH LABS

---

## Second Edition

Gary Dunning



---

---

# TABLE OF CONTENTS

*Introduction v*

## **Part 1: Introduction to the ControlLogix Programmable Automation Controller**

	Introduction .....	1
<b>Chapter 1</b>	Introduction to ControlLogix Hardware.....	3
<b>Chapter 2</b>	Introduction to RSLogix 5000 Software .....	47
<b>Chapter 3</b>	Number Systems.....	83
<b>Chapter 4</b>	RSLogix 5000 Project Organization .....	106
<b>Chapter 5</b>	Understanding ControlLogix I/O Addressing.....	126
<b>Chapter 6</b>	Modular ControlLogix I/O Configuration.....	148
<b>Chapter 7</b>	CompactLogix I/O Configuration.....	195
<b>Chapter 8</b>	Communication between Your Personal Computer and Your ControlLogix....	214
<b>Chapter 9</b>	Creating and Monitoring RSLogix 5000 Tags .....	234
<b>Chapter 10</b>	Introduction to Logic.....	255
<b>Chapter 11</b>	The Basic Relay Instructions.....	283
<b>Chapter 12</b>	ControlLogix Timer Instructions .....	309
<b>Chapter 13</b>	Adding Ladder Rung Documentation .....	333
<b>Chapter 14</b>	ControlLogix Counter Instructions.....	350
<b>Chapter 15</b>	Comparison Instructions .....	385
<b>Chapter 16</b>	Data-Handling Instructions.....	410
<b>Chapter 17</b>	Introduction to the Get System Values (GSV) and Set Systems Values (SSV) Instructions.....	440
<b>Chapter 18</b>	Introduction to the RSLogix 5000 Function Block Programming Language ...	474

**Part 2: Configuring RSLinx Drivers and Communication**

	Introduction .....	521
<b>Chapter 19</b>	Configuring a Serial Driver Using RSLinx.....	523
<b>Chapter 20</b>	Configuring the Keyspan by Tripp Lite, High-Speed USB to Serial Adapter Model USA-19HS .....	532
<b>Chapter 21</b>	Configuring an RSLinx Serial Driver Using a Rockwell Automation 9300-USBS USB to Serial Adapter .....	541
<b>Chapter 22</b>	Installing and Configuring a USB Driver for 1756-L7 Series Controllers .....	551
<b>Chapter 23</b>	Determine and Modify a Personal Computer's IP Address.....	560
<b>Chapter 24</b>	Configuring 1756 ControlLogix Modular Ethernet Hardware.....	579
<b>Chapter 25</b>	Configuring Ethernet IP Address for a CompactLogix 1769-L23E, 1769-L32E, or 1769-L35E .....	592
<b>Chapter 26</b>	Configuring a 1756-ENET Ethernet Driver Using RSLinx .....	600
<b>Chapter 27</b>	Configuring Ethernet/IP Drivers Using RSLinx Software.....	605
<b>Chapter 28</b>	Configuring a CompactLogix 1769-L23E, 1769-L32E, or 1769-L35E Ethernet/IP Driver Using RSLinx .....	611
<b>Chapter 29</b>	Configuring a USB Driver for a 1756 Ethernet Communications Module .....	618

*Glossary* 629